

REAR WHEEL

REMOVAL

Raise the rear wheels off the ground with a jack or block under the engine.

Remove the wheel nuts and wheels.

INSTALLATION


Install the rear wheel with the tire valve facing out. Install the wheel nuts and tighten them.

TORQUE:

'85: 50–60 N·m (5.0–6.0 kg·m, 36–51 ft·lb)

After '85:

60–70 N·m (6.0–7.0 kg·m, 43–51 ft·lb)

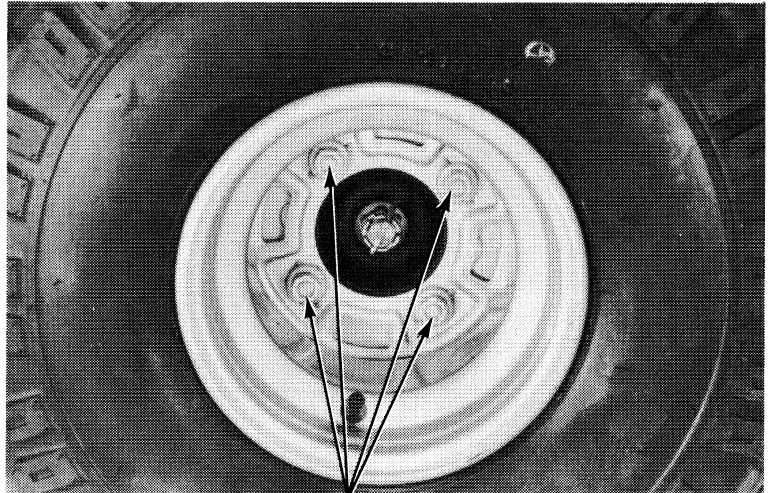

WHEEL NUTS

REAR BRAKE

BRAKE DRUM REMOVAL

Remove the right rear wheel.

'85:


Remove the two screws attaching the brake drum and remove the drum from the wheel hub.

After '85:

Remove the skid plate, and stone guard.

Remove the cotter pin, axle nut, lock washer and wheel hub from the axle.

Remove the drum cover mounting bolts and drum brake cover.

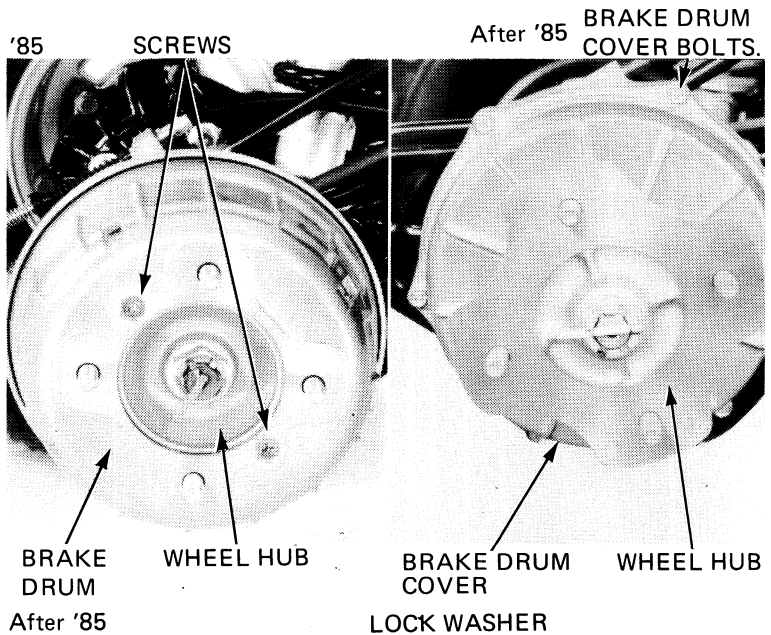

After '85


LOCK WASHER

BRAKE DRUM/COVER INSPECTION

After '85:

Check the brake drum cover dust seal for damage.

Replace, if necessary.

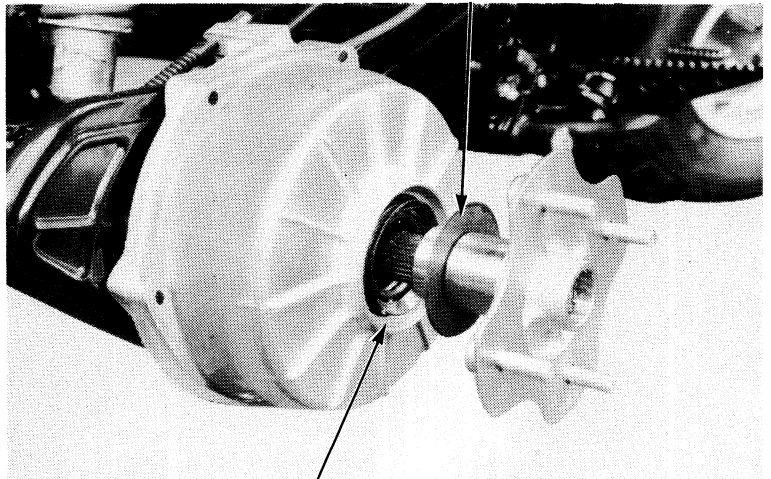

DUST SEAL