


REAR AXLE/WHEEL BEARINGS


REMOVAL

Remove the following:

- the right and left rear wheels (Page 12-3).
- the brake drum (Page 12-3).
- cotter pins, axle nuts and both rear wheel hubs from the axle shaft.

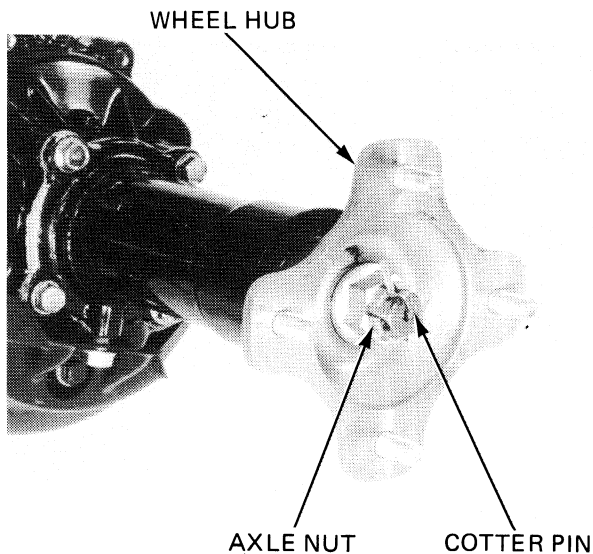

Disconnect the breather tube from the brake panel. Remove the rear brake adjuster nuts and brake cables from the brake panel. Remove the brake panel mounting nuts and the panel.

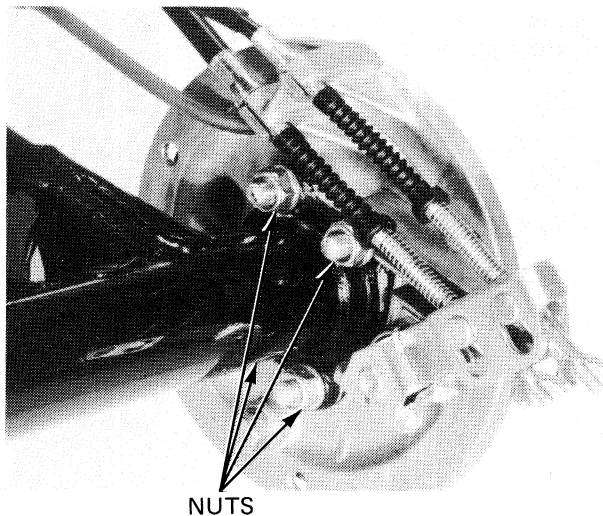

Remove the left bearing housing mounts bolts and the bearing housing from the swing arm. Remove the wheel hub spacer left end of the axle shaft.

