


REAR WHEEL/BRAKE/SUSPENSION/FINAL DRIVE

PIVOT BEARING REPLACEMENT

Remove the dust seals and bearing inner races from the frame.

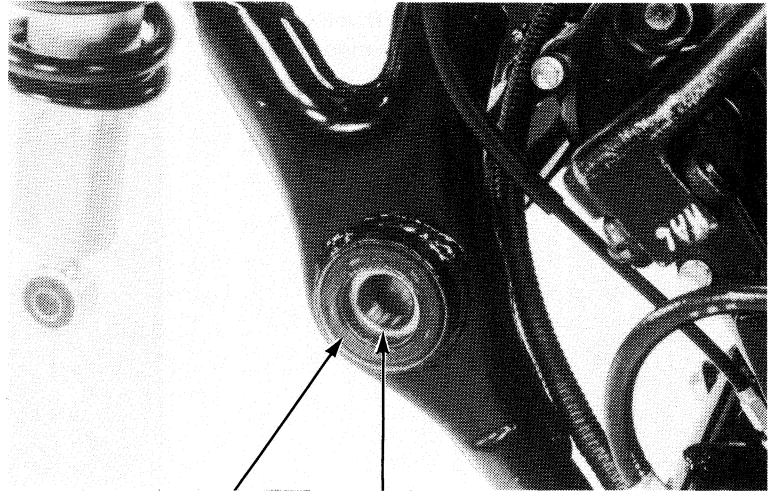


'85 Only DUST SEAL BEARING

BEARING REMOVER
07936-8890200

BEARING REMOVER ASSY
07936-8890300

Remove the bearing using the bearing remover, as shown.

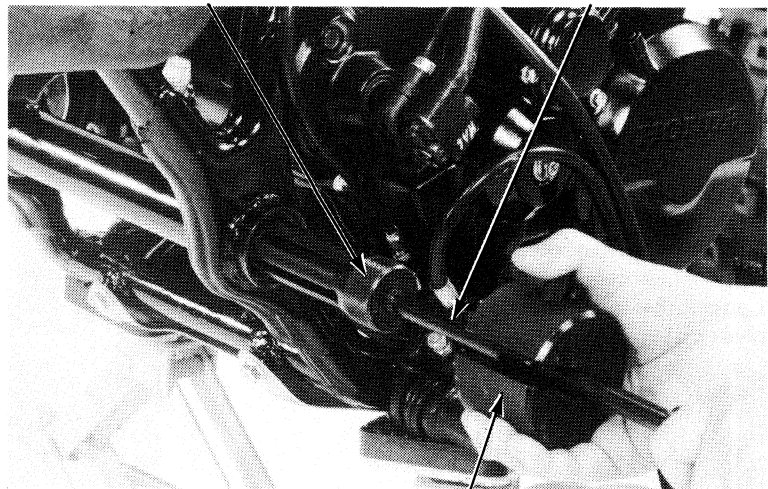


REMOVER WEIGHT
07741-0010201 or 07936-3710200

DRIVER 07749-0010000

Install new grease retainer plates and drive new bearing outer races into the swingarm pivot.

NOTE

Replace the bearing inner and outer races as a set. Replace the grease retainer plate whenever it is removed.

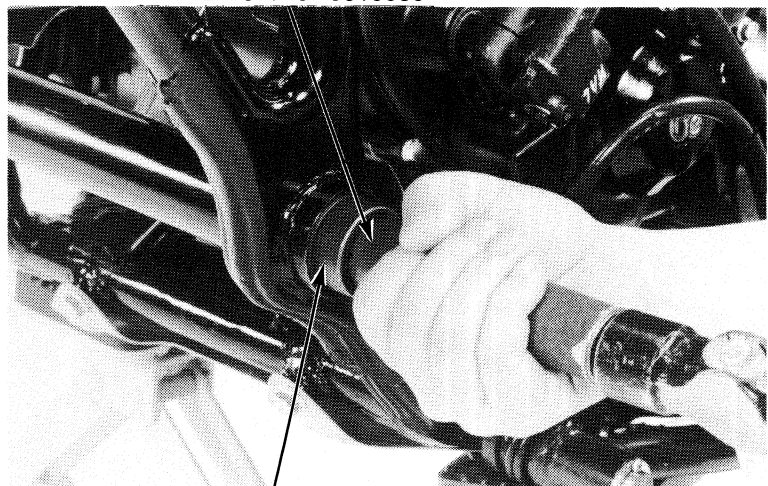

ATTACHMENT, 37 x 40 mm 07746-0010200