



Apply grease to the bearing inner races and dust seals and install them onto the swing arm.

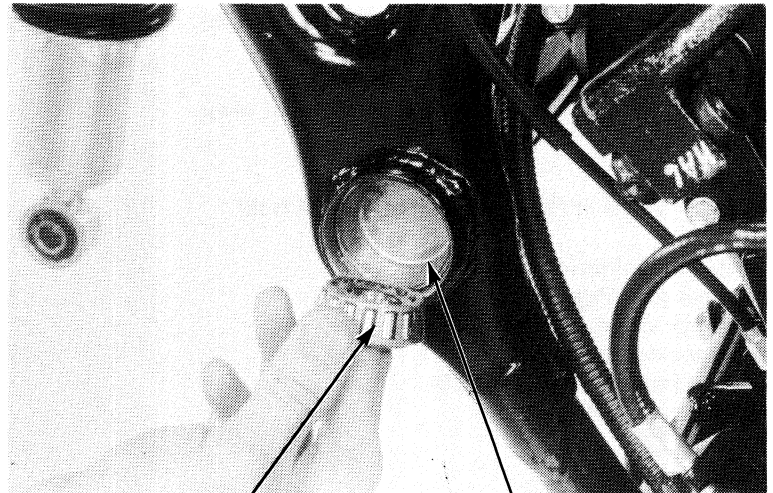

BEARING BEARING INNER RACE


### INSTALLATION

Install the swing arm boot with its "UP" mark up.

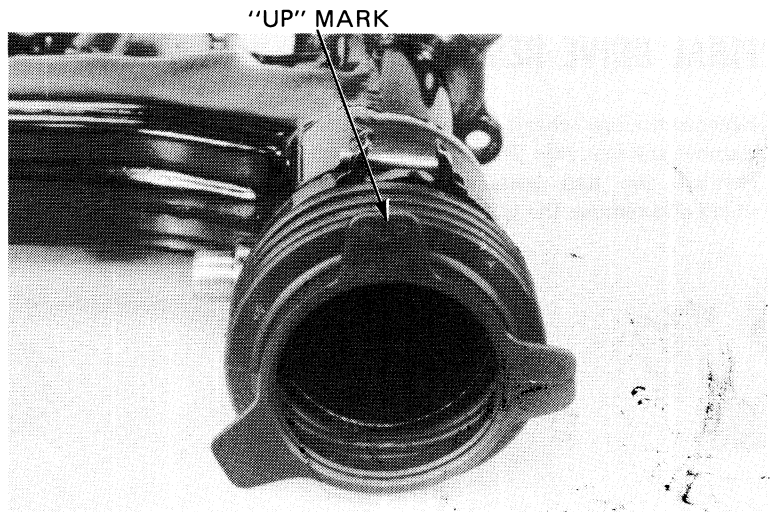

"UP" MARK

Apply grease to the pivot bolt tips and install the swing arm and pivot bolts.

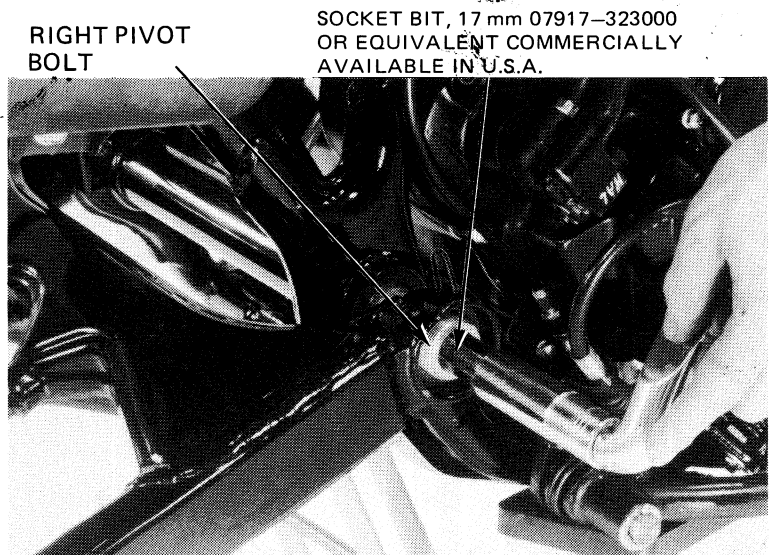

RIGHT PIVOT BOLT

SOCKET BIT, 17 mm 07917-323000 OR EQUIVALENT COMMERCIALY AVAILABLE IN U.S.A.