

## IGNITION TIMING

Remove the timing hole cap.  
Connect a timing light.  
Start the engine and allow it to idle.

**IDLE (1,400 rpm): "F" mark should be aligned  
with the index mark**

If ignition timing cannot be corrected, inspect the  
CDI unit and pulse generator.

