



→ Press A-button

⋯→ Press A-button when the fuel gauge 1st (E) segment is flashing

When the fuel gauge 1st (E) segment is flashing, display moves to the available driving distance.

