

## **Instruments** (Continued)

## **Display Setting**

Select the items you want to set from the following setting modes.

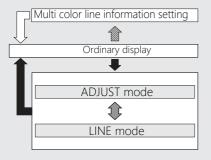

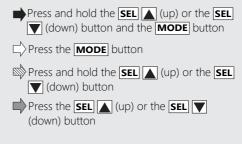

To set the ADJUST mode or LINE mode, press the **MODE** button. If the ignition switch is turned to the OFF position or none of the **MODE**, **SEL** (up) and **SEL** (down) buttons are pressed for about 30 seconds, the control is automatically switched from the setting mode to the ordinary display.