



## Instruments *(Continued)*

### 7 Changing the fuel mileage meter unit:

- 1 Press the **SEL**  (up) button or the **SEL**  (down) button to select "L/100km" or "km/L".
  - ▶ The message of "UNIT FUEL COM" scrolls in INFO 1 display.



- 2 Press the **MODE** button. The fuel mileage meter unit is set, and then the display will return to the ordinary display.