



## Ignition Switch

Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.

## Engine stop switch/ Start button

Should normally remain in the  (Run) position.

- ▶ In an emergency, switch to the  (Stop) position to stop the engine.

**ON**  
Turns electrical system on for starting/riding.

**OFF**  
Turns engine off.

**LOCK**  
Locks steering.

