

Honda selectable torque control *(Continued)*

Torque Control level setting

The Torque Control level setting can be done only when the riding mode is USER. **➡ P.59**


The level can be selected by pressing the Torque Control switch.

- ▶ High is the maximum Torque Control level
- ▶ Low is the minimum Torque Control level

Torque Control on and off

Torque Control can be turned on and off by pressing and holding the Torque Control switch.

Torque Control switch

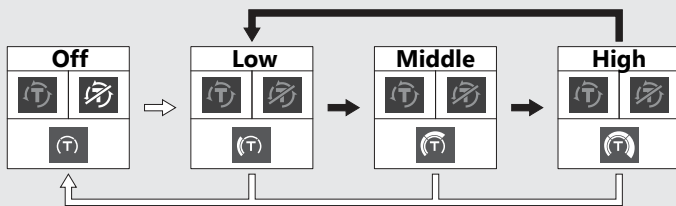

➡ Press the Torque Control switch

⇨ Press and hold the Torque Control switch