

## Setting the riding mode

You can change the P, EB and T levels on the USER of the riding mode.

- 1 Stop the motorcycle.
- 2 Select the USER in the riding mode .  
**➔P.62**
- 3 Press and hold the **MODE** button until P display is flashed.
- 4 Press the **SEL** **▲** (up) or **▼** (down) button until the desired level is displayed.
- 5 Press the **MODE** button. The P level is set, and EB display is flashed.
- 6 Press the **SEL** **▲** (up) or **▼** (down) button until the desired level is displayed.
- 7 Press the **MODE** button. The EB level is set, and T display is flashed.

- 8 Press the **SEL** **▲** (up) or **▼** (down) button or torque control switch until the desired level is displayed.
  - ▶ T level can be changed to off by pressing and holding the torque control switch.
  - ▶ T level can be changed from Off to Low by pressing and holding the torque control switch or pressing the **SEL** **▲** (up) button.
- 9 Press and hold the **MODE** button until ordinary display is displayed

You can stop setting the riding modes at any time by pressing and holding the **MODE** button.