


Riding mode *(Continued)*

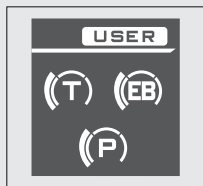

- Press and hold the **MODE** button
- Press the **MODE** button
- Press the **SEL** (up) button
- Press the **SEL** (down) button
- Press the Torque Control switch
- Press and hold the Torque Control switch

