


Gauges, Indicators & Displays

Display Check

When the ignition switch is turned ON, the left multi-function display (1) and right multi-function display (2) will temporarily show all the modes and digital segments so you can make sure the liquid crystal display is functioning properly.

The displays are identified in the table on pages 18 – 19 with the words: *Display Check*.

If any part of these displays does not come on when it should, have your dealer check for problems.

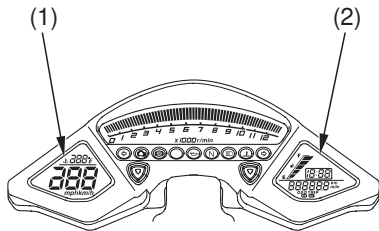

- (1) left multi-function display
- (2) right multi-function display