


Gauges, Indicators & Displays

Selecting the Brightness of Display

You can select the brightness of the display from 3 levels.

1. Turn the ignition switch ON.
2. Push and hold both the SET button (1) and RESET button (2) for more than 2 seconds. The display will start flashing.
3. Push the RESET button to select the brightness.
3-Maximum/2-Middle/1-Minimum
4. To end the selection and proceed to adjust the time (page 31), push the SET button.
 - To end the selection, push and hold both the SET and RESET button for more than 2 seconds or turn the ignition switch OFF.

The display will stop flashing automatically and the selection will be cancelled if the button is not pushed for about 30 seconds.

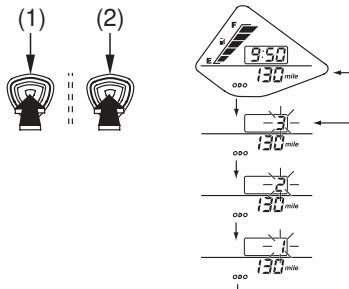

- (1) SET button
- (2) RESET button