


Changing the Temperature Unit

The coolant temperature meter can display “°F” (Fahrenheit) or “°C” (Centigrade).

1. Turn the ignition switch ON.
2. Select the brightness of the display (page 30).
3. Adjust the time (page 31).
4. Change the speed and mileage unit (page 34).
5. The unit you are setting in the multi-function display start flashing.
6. Push the RESET button (1) to select “°F” or “°C”.
7. To end the selection, push and hold both the SET and RESET button for more than 2 seconds or turn the ignition switch OFF.

- To end the selection and proceed to select the brightness of the display (page 30), push the SET button (2).

The display will stop flashing automatically and the selection will be cancelled if the button is not pushed for about 30 seconds.

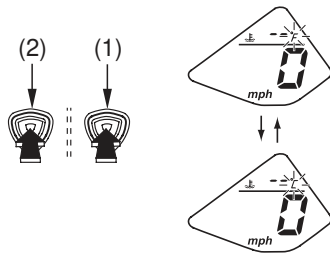

- (1) RESET button
(2) SET button