

# Braking

---

## Anti-lock Brake System (ABS) Indicator

### (CB1000R ABS)

Normally, Anti-lock Brake System (ABS) indicator comes on when the ignition is turned ON, and goes off after you ride the motorcycle at speed above 6 mph (10 km/h). If there is an ABS problem, the indicator comes on and remains on. The ABS system does not operate when the ABS indicator is on.

If the ABS indicator comes on while riding, stop the motorcycle in a safe place and turn off the engine.

Turn the ignition ON again. The indicator should come on, and go off after you ride the motorcycle at speeds above 6 mph (10 km/h). If it does not go off, ABS is not functioning, but the brakes still work as part of the Combined Braking System and provide normal stopping ability. However, you should have the system checked by your dealer as soon as possible.

The ABS indicator may come on if you turn the rear wheel while the motorcycle is upright on the stand. This is normal. Turn the ignition OFF, then turn it ON. The indicator should come on, then go off after you run the motorcycle above 19 mph (30 km/h).