

Maintenance Schedule

			FREQUENCY	ODOMETER READING (Note 1)							Refer to page	
				× 1,000 mi	0.6	4	8	12	16	20		24
ITEMS			NOTE	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	
EMISSIONS-RELATED ITEMS	*	FUEL LINE				I		I		I		—
	*	THROTTLE OPERATION					I		I		I	120
		AIR CLEANER	2					I			I	115
		CRANKCASE BREATHER	3			C	C	C	C	C	C	118
	*	SPARK PLUGS			EVERY 16,000 mi (25,600 km) I, EVERY 32,000 mi (51,200 km) R							—
	*	VALVE CLEARANCE							I			—
		ENGINE OIL			INITIAL = 600 mi (1,000 km) or 1 month: R REGULAR = EVERY 8,000 mi (12,800 km), or 12 months: R							101
		ENGINE OIL FILTER			R		R		R		R	106
	*	ENGINE IDLE SPEED			I	I	I	I	I	I	I	—
		RADIATOR COOLANT	5				I		I		R	111
	*	COOLING SYSTEM					I		I		I	—
*	SECONDARY AIR SUPPLY SYSTEM					I		I		I	—	
*	EVAPORATIVE EMISSION CONTROL SYSTEM	4					I			I	—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page234).

**In the interest of safety, we recommend these items be serviced only by your dealer.