


1. With the engine at normal operating temperature, check the coolant level in the reserve tank (1). It should be between the UPPER (2) and LOWER (3) level marks.  
If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your dealer for repair.
2. Remove the clips (4) (page 97) and inner cover (5).
3. Remove the reserve tank cap (6).  
Always add coolant to the reserve tank.  
Do not attempt to add coolant by removing the radiator cap.
4. Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.
5. Install the reserve tank cap.
6. Install the removed parts in reverse order of removal.

## LEFT FRONT

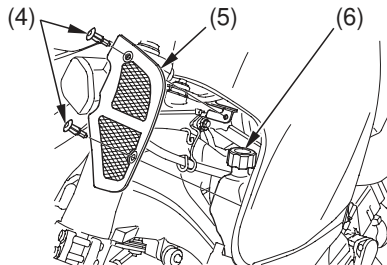

- (4) clips
- (5) inner cover
- (6) reserve tank cap