

Coolant temperature gauge ()

Display range: 95 °F (35 °C) to 270 °F (132 °C)

- Below 94 °F (34 °C): “- -” displays
 - Between 251 °F (122 °C) and 269 °F (131 °C):
 - High coolant temperature indicator lights
 - Coolant temperature digit flash
 - Above 270 °F (132 °C):
 - High coolant temperature indicator lights
 - “270” (°F) / “132” (°C) flashes
- ▶ Even if the engine coolant temperature is low, the cooling fan may start running when you rev up the engine. This is normal.

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 1.06 US gal (4.0 liters)

Display Check

When the ignition switch is turned on, all the mode and digital segments will show, and the tachometer segment will progress to maximum scale and then disappear. If any part of these displays does not come on when it should, have your dealer check for problems.

When the fuel system has an error, the fuel gauge indicators will be displayed as shown in the illustration. If this occurs, see your dealer as soon as possible.

