

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

An optional tool kit may be available. Check with your Honda dealer’s parts department.

<b>Importance of Maintenance</b> .....	P. 35	<b>Coolant</b> .....	P. 67
<b>Maintenance Schedule</b> .....	P. 37	<b>Brakes/Clutch</b> .....	P. 70
<b>Maintenance Fundamentals</b> .....	P. 40	<b>Side Stand</b> .....	P. 74
<b>Removing &amp; Installing Body Components</b> ...	P. 55	<b>Drive Chain</b> .....	P. 75
Rear Seat.....	P. 55	<b>Throttle</b> .....	P. 78
Front Seat.....	P. 56	<b>Other Adjustments</b> .....	P. 79
Left Side Cover .....	P. 57	Clutch and Brake Levers.....	P. 79
Clips.....	P. 58	Front Suspension .....	P. 80
Battery .....	P. 58	Rear Suspension.....	P. 83
<b>Engine Oil</b> .....	P. 60	Headlight Aim.....	P. 85
<b>Air Cleaner</b> .....	P. 64	Brake Light Switch .....	P. 85
<b>Crankcase Breather</b> .....	P. 66		