

Tire Puncture ► Removing Wheels

- Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.
- On the left side, withdraw the front axle shaft, and remove the side collars and wheel.

