


Front Seat

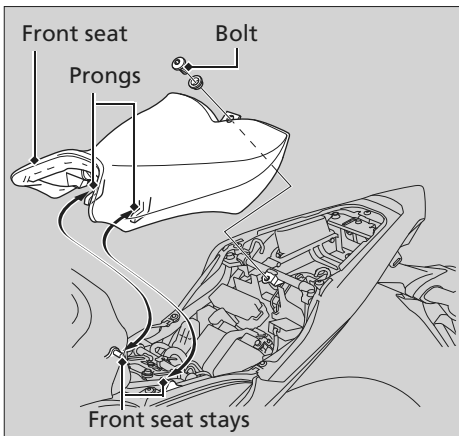

Removal

1. Remove the rear seat. [▶ P. 55](#)
2. Remove the bolt.
3. Pull the front seat back and up.

Installation

1. Install the prongs into the front seat stays.
2. Install and tighten the bolt securely.
Make sure that the seat is locked securely in position to pull it up lightly.