

4 Changing of coolant temperature gauge unit:

- 1 Press RESET button to select "°F" (Fahrenheit) or "°C" (Centigrade).
- 2 To end the selection and proceed to adjust the brightness of the display, press the SET button.

The established setting can be set by pressing and holding the SET button and RESET button for more than 2 seconds, or turning the ignition switch to OFF.

The control is automatically switched from the setting mode to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.