


Battery

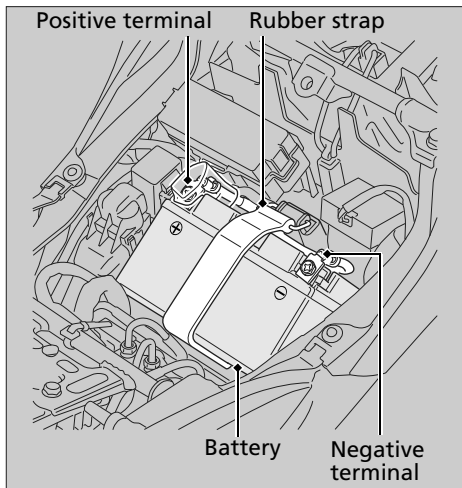

Removal

Make sure the ignition switch is off.

1. Remove the rear seat and front seat.
➤ P. 56, 57
2. Unhook the rubber strap.
3. Disconnect the negative \ominus terminal from the battery.
4. Disconnect the positive \oplus terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.