


Front Seat

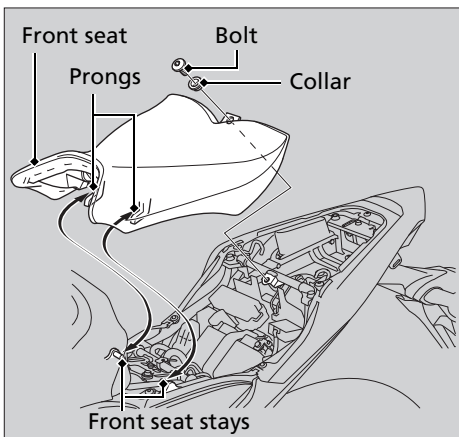

Removal

1. Remove the rear seat. ► P. 57
2. Remove the bolt and collar.
3. Pull the front seat back and up.

Installation

1. Install the prongs into the front seat stays.
2. Install the collar and tighten the bolt securely.
To make sure the seat is locked securely into position, pull up lightly.