


## Rear Seat

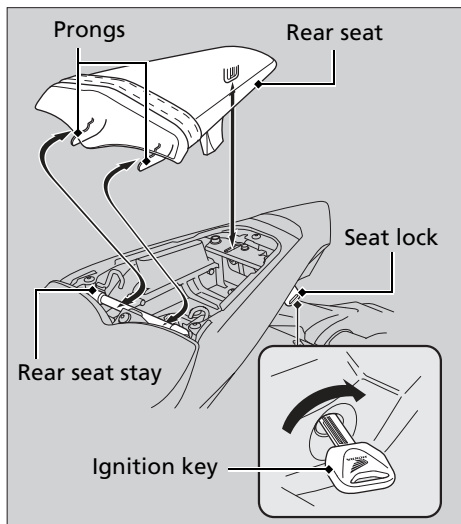

### Removal

1. Insert the ignition key into the seat lock, and turn and hold the key clockwise to unlock the rear seat.
2. Pull the rear of the rear seat back and up.

### Installation

1. Insert the prongs into the rear seat stay.
2. Push forward and down on the rear of the rear seat until it locks in place.

Make sure that the seat is locked securely in position to pull it up lightly.

The seat locks automatically when closed.

Take care not to lock your key in the compartment under the seat.