

## Air Cleaner ► Inspecting & Changing Air Cleaner Element

4. Remove the screws and air cleaner housing cover.
5. Pull out the air cleaner element and check it for any damage.
  - Blow away the remaining dust by applying compressed air from the outside of the air cleaner element.
  - Replace the air cleaner element if it is excessively dirty, torn or damaged.
6. Install the air cleaner element or a new one.
7. Install the parts in the reverse order of removal.

