

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 85	<b>Tire Puncture</b> .....	P. 89
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 86	<b>Electrical Trouble</b> .....	P. 97
<b>Warning Indicators On or Flashing</b> .....	P. 87	Battery Goes Dead .....	P. 97
Low Oil Pressure Indicator .....	P. 87	Burned-out Light Bulb .....	P. 97
PGM-FI (Programmed Fuel Injection)		Blown Fuse .....	P. 101
Malfunction Indicator Lamp (MIL) .....	P. 87		
<b>Other Warning Indication</b> .....	P. 88		
Fuel Gauge Failure Indication .....	P. 88		