

### Starter Motor Operates But Engine Does Not Start

---


Check the following items:

- Check the correct engine starting sequence. ➤ P. 28
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

---

Check the following items:

- Make sure engine stop switch is in Run  position. ➤ P. 26
  - Check for a blown fuse. ➤ P. 101
  - Check for a loose battery connection or battery terminal corrosion. ➤ P. 44, 54
  - Check the condition of the battery. ➤ P. 97
- If the problem continues, have your motorcycle inspected by your dealer.