


## Headlight Bulb

1. Remove the front visor by removing the bolts.

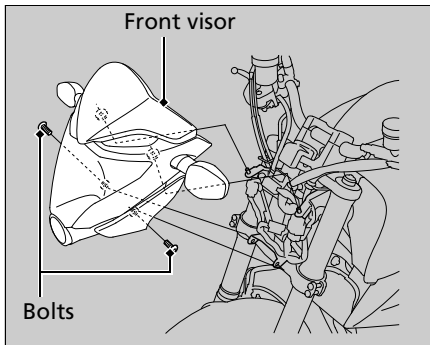

2. Disconnect the headlight connector.
3. Remove the dust cover.
4. Turn the bulb holder counterclockwise and remove the bulb.

5. Install a new bulb and parts in the reverse order of removal.
  - Make sure the tab on the dust cover is upper.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with isopropyl (rubbing) alcohol.

