


Main Fuse & FI Fuse

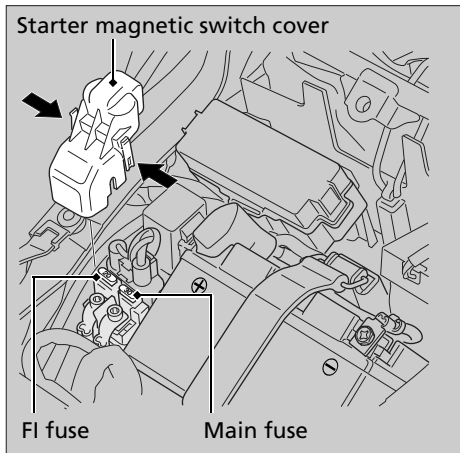

1. Remove the rear seat and front seat.
► P. 56, 57
2. Remove the starter magnetic switch cover.

3. Pull the main fuse and FI fuse out one by one and check for a blown fuse.
Always replace a blown fuse with a spare fuse of the same rating.
► Spare fuses are provided in the fuse box. ► P. 101
4. Reinstall the parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.