 


- ! Press the **SEL** button until the desired minute is displayed.
- u Press and hold the **SEL** button to advance the minute fast.



- ! Press the **SET** button. The clock is set, and then the display moves to the changing of the speed and mileage unit.
- u The adjustment can also be set by turning the ignition switch off.

## 2 Changing of the speed and mileage unit:

- !a After clock setting, the speed and mileage unit start flashing.
- !b Press the **SEL** button to select either "km/h" and "km" or "mph" and "mile".
- !c Press the **SET** button. The speed and mileage unit is set, and then the display returns to the ordinary display.
- u The adjustment can also be set by turning the ignition switch off.

