










Items		Frequency *1								Regular Replace	Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24			
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-Related Items	Fuel Line				I		I		I		-	
	Throttle Operation				I		I		I		101	
	Air Cleaner *2					R			R		72	
	Crankcase Breather *3			C	C	C	C	C	C		102	
	Spark Plug		Every 16,000 mi (25,600 km): I				Every 32,000 mi (51,200 km): R					-
	Valve Clearance						I					-
	Engine Oil			R		R		R		R	1 Year	84
	Engine Oil Filter			R				R				86
	Engine Idle Speed					I		I		I		-
	Radiator Coolant *5					I		I		I	3 Years	88
	Cooling System					I		I		I		-
Secondary Air Supply System							I				-	
Evaporative Emission Control System *4							I				-	

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➔ P. 141).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C** : Clean
- R** : Replace
- L** : Lubricate