
Switches

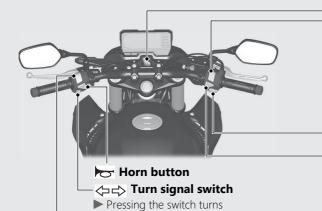

Headlight dimmer switch

the turn signal off.

- **■** : High beam
- **■**D: Low beam

Engine stop switch

Should normally remain in the

- (Run) position.
- ► In an emergency, switch to the ☆ (Stop) position (the starter motor will not operate) to stop the engine.

(3) Start button

A Hazard switch

Switchable when the ignition switch is in the ON position.