

Troubleshooting

Engine Will Not Start	P. 109
Overheating (Segment H flashes in coolant temperature gauge)	P. 110
Warning Indicators On or Flashing	P. 111
Low Oil Pressure Indicator	P. 111
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 111
ABS (Anti-lock Brake System) Indicator	P. 112
Other Warning Indications	P. 113
Fuel Gauge Failure Indication.....	P. 113
Coolant Temperature Gauge Failure	
Indication	P. 114
Tire Puncture	P. 115
Electrical Trouble	P. 122

Battery Goes Dead.....	P. 122
Burned-out Light Bulb	P. 122
Blown Fuse.....	P. 125