

**Equipment**

- Owner's Manual ..... 55, 129
- Tool Kit..... 55

**F**

- Flooded Engine** ..... 51
- Front Seat** ..... 80
- Front Suspension**..... 106

**Fuel**

- Average Fuel Mileage Meter..... 22
- Consumption Meter ..... 23
- Current Fuel Mileage Meter ..... 22
- Gauge ..... 20
- Recommended ..... 53
- Remaining..... 20
- Reserve Fuel Consumption..... 24
- Tank Capacity ..... 53

- Fuses**..... 69, 125

**G**

- Gasohol** ..... 144
- Gasoline** ..... 53
- Gear Position Indicator** ..... 20

**H**

- Hazard Switch**..... 48
- Headlight Aim** ..... 104
- Headlight Dimmer Switch** ..... 48
- Helmet Holder**..... 54
- High Beam Indicator**..... 43
- Honda Contacts** ..... 148
- Horn Button** ..... 48

**I****Ignition Cut-off System**

- Banking Sensor..... 130
- Side Stand..... 94

- Ignition Key**..... 128

- Ignition Switch**..... 49, 51, 129

- Indicators**..... 42

- Information Record**..... 154

- Instruments** ..... 18

**L**

- Labels**..... 7

- Load Limits** ..... 15

- Loading Guidelines**..... 15

- Low Oil Pressure Indicator** ..... 45, 111