


## Seat

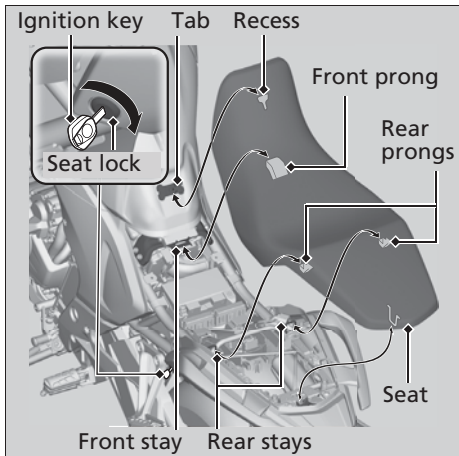

### Removal

1. Insert the ignition key into the seat lock.
2. Turn it clockwise, then pull the seat back and up.

### Installation

1. Insert the front and rear prongs into the front and rear stays on the frame.
2. Insert the recess into the tab.
3. Push forward and down on the rear of the seat until it locks in place.

Make sure that the seat is locked securely in position by pulling up lightly.

The seat locks automatically when closed. Take care not to lock your key in the compartment under the seat.