


Headlight Bulb

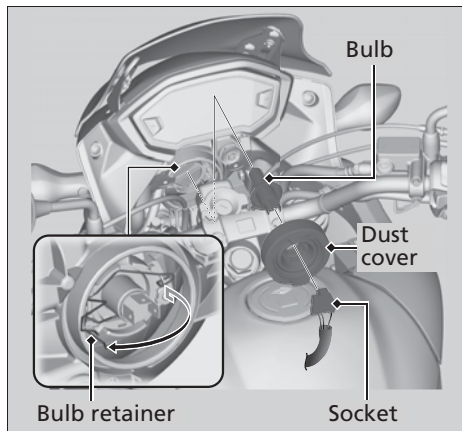

1. Remove the bulb lid. [▶ P. 61](#)
2. Pull off the socket without turning.
3. Remove the dust cover.
4. Unhook the bulb retainer and pull out the bulb without turning it.
5. Install a new bulb and parts in the reverse order of removal.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with isopropyl (rubbing) alcohol.