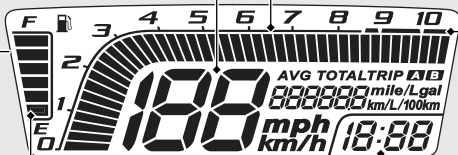


Speedometer**Fuel gauge**

Remaining fuel when only 1st (E) segment starts flashing:
approximately 0.74 US gal (2.8 L)

If the fuel gauge indicator flashes in a repeat pattern or turns off: ➔ P.95

Tachometer**NOTICE**

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone

(excessive engine rpm range)

Clock (12-hour display)

To set the clock: ➔ P.24

