

# Maintenance Schedule

Items		Frequency *1								Regular Replace	Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24			
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-Related Items	Fuel Line	🔧			I		I		I			-
	Throttle Operation	🔧			I		I		I			83
	Air Cleaner *2						R		R			69
	Crankcase Breather *3			C	C	C	C	C	C			84
	Spark Plug	🔧					R					-
	Valve Clearance	🔧					I					-
	Engine Oil			R		R		R		R	1 Year	67
	Engine Oil Filter			R				R				67
	Engine Idle Speed	🔧			I		I		I			-
	Radiator Coolant *5				I		I		I	3 Years		70
	Cooling System	🔧			I		I		I			-
	Secondary Air Supply System	🔧						I				-
	Evaporative Emission Control System *4	🔧						I				-

## Maintenance Level

🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (📖 P. 124).

🔧 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

## Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)  
 L : Lubricate  
 R : Replace  
 C : Clean