



### Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment.

1. Remove the clips (➤ P. 62) and the lid.

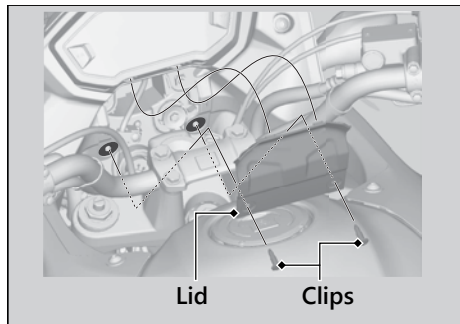

2. Turn the pinion in or out as necessary using a Phillips screwdriver. Obey local laws and regulations.

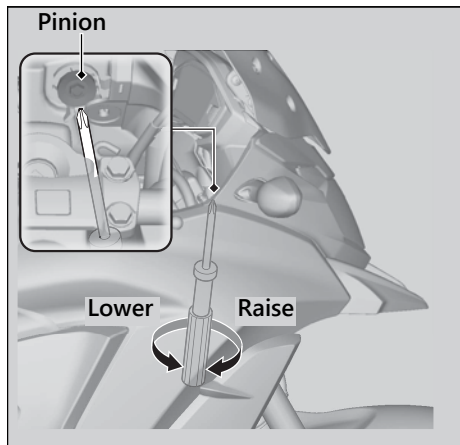

3. Install the lid and the clips.