


Instruments *(Continued)*

Coolant temperature gauge

When the coolant is over specified temperature, the segment H flashes.

If the segment H flashes while riding: → P.109

If the coolant temperature gauge indicator flashes: → P.113

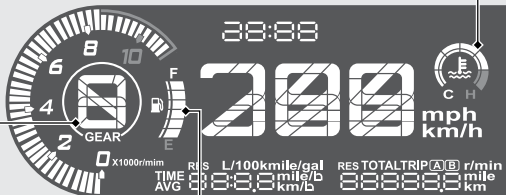

Gear position indicator

The gear position is shown in the gear position indicator.

- ▶ "-" appears when the transmission is not shifted properly.

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:
approximately 0.74 US gal (2.8 L)

If the fuel gauge indicator flashes in a repeat pattern or turns off: → P.112

