


Instruments (Continued)

3 Changing the speed and mileage unit:

- 1 Press **SEL** button to select either "km/h" and "km" or "mph" and "mile".

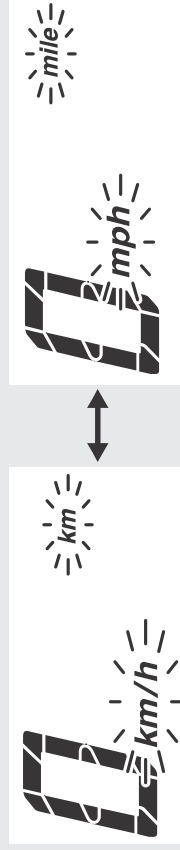

- 2 Press **SET** button. The speed and mileage unit is set, and then the display moves to the changing the fuel mileage meter unit.

4 Changing the fuel mileage meter unit:

- 1 When the "km/h" for speed and "km" for mileage are selected

Press **SEL** button to select "km/L" or "L/100km".

When the "mph" for speed and "mile" for mileage are selected

Press **SEL** button to select "mile/L" or "mile/gal".

- ▶ When "mile/gal" is selected, the unit of the fuel consumption is changed to "gal".
- 2 Press **SET** button. The fuel mileage meter unit is set, and then the display moves to the ordinary display.