

Gauges, Indicators & Displays

Current Fuel Mileage

This display shows the current, or instant fuel mileage you are getting.

When your motorcycle speed is 0.6 mph (1 km/h) or below, “— — . —” is displayed.

Average Fuel Mileage

This number is updated once per 15 seconds since you last reset the tripmeter A.

When “— — . —” is displayed, go to your Honda dealer for service.

Fuel Consumption

This display shows the fuel consumption since you last reset the tripmeter A.

When “— — — . —” is displayed, go to your Honda dealer for service.

To Reset Average Fuel Mileage and Fuel Consumption

When the tripmeter A is reset, the average fuel mileage and fuel consumption are reset together (page 36).

Also, after refueling more than the reserve amount, the tripmeter A, average fuel mileage, and fuel consumption can be automatically reset.

You can activate or deactivate the automatic reset mode by refueling (page 39).