



### Coolant temperature gauge ( )

Display range: 95 °F (35 °C) to 270 °F (132 °C)

- Below 94 °F (34 °C) : " - - " displays
- Between 251 °F (122 °C) and 269 °F (131 °C):
  - High coolant temperature indicator and warning indicator light
  - Coolant temperature gauge (flashing digits)
- Above 270°F (132 °C):
  - High coolant temperature indicator and warning indicator light
  - " 270 " (°F) / " 132 " (°C) flashes
    - ▶ Even if the engine coolant temperature is low, the cooling fan may start running when you rev up the engine. This is normal.

### Display Check

When the ignition switch is turned ON, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.