

Troubleshooting

Engine Will Not Start P.85

Overheating

**(High coolant temperature
/warning indicators are ON)**..... P.86

Warning Indicators ON or Flashing..... P.87

Low Oil Pressure Indicator P.87

PGM-FI (Programmed Fuel Injection)

Malfunction Indicator Lamp (MIL)..... P.87

Combined ABS Indicator

(CBR1000RR ABS)..... P.88

HESD (Honda Electronic Steering Damper)

Indicator P.88

Tire Puncture..... P.89

Electrical Trouble.....P.97

Battery Goes Dead.....P.97

Burned-out Light BulbP.97

Blown Fuse P.102