

## Indicators *(Continued)*







### REV Indicators


- Comes on briefly when the ignition switch is turned on.

Initial setting

blinking RPM: 13,000 r/min (rpm) (red zone)

interval RPM: 200 r/min (rpm)

REV indicators	r/min (rpm)
	12,000 r/min (rpm)
	12,200 r/min (rpm)
	12,400 r/min (rpm)
	12,600 r/min (rpm)
	12,800 r/min (rpm)
	13,000 r/min (rpm)

▶ Setting of REV indicators:  P.23