

Troubleshooting

Engine Will Not Start	P. 94	Tire Puncture	P. 98
Overheating (High coolant temperature indicator is on)	P. 95	Electrical Trouble	P. 106
Warning Indicators On or Flashing	P. 96	Battery Goes Dead	P. 106
Low Oil Pressure Indicator	P. 96	Burned-out Light Bulb	P. 106
PGM-FI (Programmed Fuel Injection)		Blown Fuse.....	P. 111
Malfunction Indicator Lamp (MIL).....	P. 96		
Combined ABS Indicator (CBR1000RR ABS) ..	P. 97		
HESD (Honda Electronic Steering Damper)			
Indicator	P. 97		