

## Removal

Make sure the ignition switch is off.

1. Remove the front seat. ➤ P. 65
2. Unhook the rubber strap.
3. Disconnect the negative  $\ominus$  terminal from the battery.
4. Disconnect the positive  $\oplus$  terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

## Installation

Install the parts in the reverse order of removal. Always connect the positive  $\oplus$  terminal first. Make sure that bolts and nuts are tight.

The clock will be reset 1:00 or 1:00:00 if the battery is disconnected.

For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 55  
Battery Goes Dead ➤ P. 106