

5 Changing the coolant temperature gauge unit:

- 1 Press **SEL** button to select "°F" (Fahrenheit) or "°C" (Centigrade).
- 2 To end the selection, press **SET** button.

The established setting can also be set by turning the ignition switch to OFF.

The control is automatically switched from the setting mode A to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.